



**INSTALLATION INSTRUCTIONS**  
**For BP-2**  
**GL1800 TWO PIECE ENGINE PLATE**

- 1. Place motorcycle on center stand.**
  
- 2. Located on each side of the motorcycle beneath the gearshift lever (on the left side) and the rear brake lever (on the right side), you will find two 10mm nuts. LOOSEN, the two on the left side and remove the two on the right side and pull the cover out slightly away from the studs. Be careful not to lose the washers.**
  
- 3. Remove the three stainless screws to remove front section (narrow end) of the engine plate with the two nuts located on the left exhaust cover and slide the engine plate between the cowling and the exhaust pipe leading from the cylinder head. Now move to the right side and pull the cowling out slightly to insert the engine plate behind the cowl, it may be necessary to use a screwdriver to spring the edges of the engine plate to insert it under the cowlings, be sure the vent tube is inserted into the hole in the engine plate. Be sure the engine plate is pushed up against the header pipes on both sides and tighten the nuts on both sides. DO NOT OVER TIGHTEN THESE NUTS!**
  
- 4. Slide the removable section up over the bottom edge of the attached. Be sure they are tight. This completes the installation; check to be sure all fasteners are secure.**