



**Mounting Instructions for  
Part Numbers 1600CL and 1600S  
Adjustable Windshield Vent**  
Fits GL1500 and Aftermarket Windshields

**Note: Read instruction thoroughly before installing, cutting is required.**

1. Place bike on center stand.
2. Draw a line across the windshield from the bottom of the top windshield adjustment lines. Figure 1.
3. Cut out and trace the windshield hole pattern so that the bottom runs across this line. Center the template. It will be about 8 ½ inches from the end.
4. Drill the four (4) corners. Using a sharp power sabre saw, cut out the pattern. Put masking tape on the foot of the saw or around the area to be cut to prevent scratching.
5. Remove the windshield and install the vent. The two (2) pieces will snap together in the windshield and will be held firm by the locking screws.

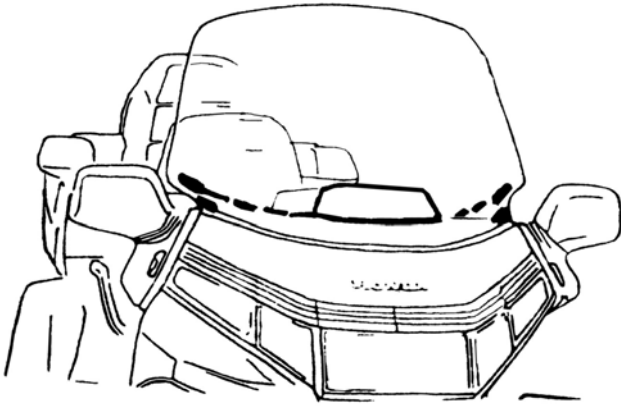


Figure 1

