




MOUNTING INSTRUCTIONS FOR 393-540 GL 1100 DRIVER FLOORBOARDS


Add On INCORPORATED

1. PLACE BIKE ON CENTERSTAND. REMOVE THE RIDER FOOTPEGS, THE FRONT LOWER ENGINE MOUNTING STUD AND THE NUT FROM THE REAR STUD OF THE FRONT EXHAUST PIPE ON EACH SIDE OF THE BIKE.

2. A "BABY MARKLAND" FLOORBOARD IS INCLUDED IN THIS KIT FOR YOUR STOCK BRAKE PEDAL. USING THE TEMPLATE PROVIDED, DRILL TWO 3/16" HOLES FROM THE BOTTOM OF THE STOCK PEDAL PAD. THEN FASTEN THE "BABY MARKLAND" WITH THE NAME TO THE REAR USING THE "KEPS" NUTS PROVIDED.

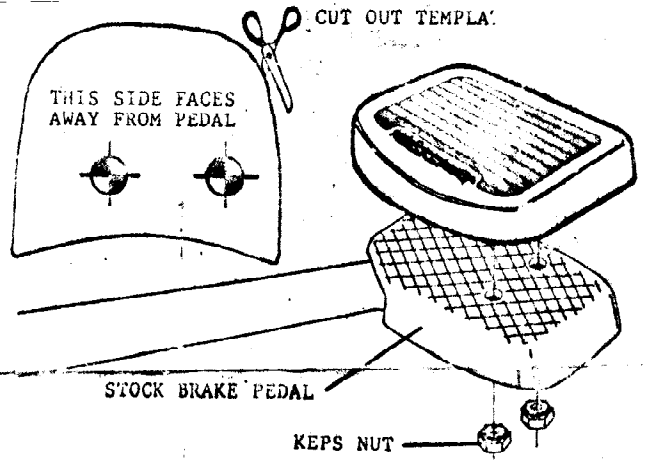


3. REMOVE THE RIGHT SIDE COVER. ADJUSTMENT OF THE STOCK BRAKE PEDAL HEIGHT IS REQUIRED TO CLEAR THE FLOORBOARD DURING NORMAL USE. JUST LOOSEN THE JAM NUT THAT SECURES THE CLEVIS ON THE THREADED SHAFT. THEN REMOVE THE CLEVIS PIN. NOW TURN THE CLEVIS SEVEN (7) HALF-TURNS DOWN, RE-INSTALL THE CLEVIS PIN AND COTTER PIN, AND RETIGHTEN THE JAM NUT SECURELY. REMOVE THE BRAKE LIGHT SWITCH SPRING FROM THE PEDAL AND SWITCH. CUT AND REBEND AS SHOWN AND THEN REINSTALL.

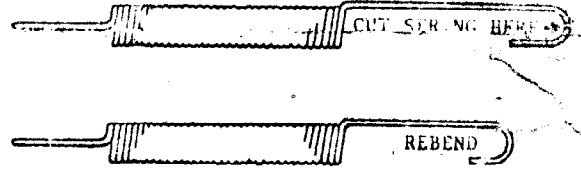


4. PLACE TWO 5/16" FLAT WASHERS ON EACH EXHAUST STUD THAT YOU HAVE REMOVED THE NUTS, AND THEN INSTALL THE EXHAUST STUD HANGING BRACKETS. SECURE LOOSELY WITH THE STOCK NUTS.

5. INSERT THE NEW ENGINE STUD PROVIDED THROUGH THE RIGHT SIDE ENGINE MOUNT PLATE, AND THEN INSTALL THE RIGHT AND FLOORBOARD SUPPORT. FASTEN THE REAR MOUNTING PLATE USING THE 3/8" SPACER AND STOCK FOOTPEG BOLT AND WASHER. DO NOT TIGHTEN. IF YOUR BIKE HAS AN INTERSTATE TYPE GUARD, INSTALL TWO 7/16" WASHERS BETWEEN GUARD AND FLOORBOARD BRACKET. IF THERE IS NO GUARD, USE THREE 1/2" FLAT WASHERS BETWEEN THE FRAME AND FLOORBOARD BRACKET.

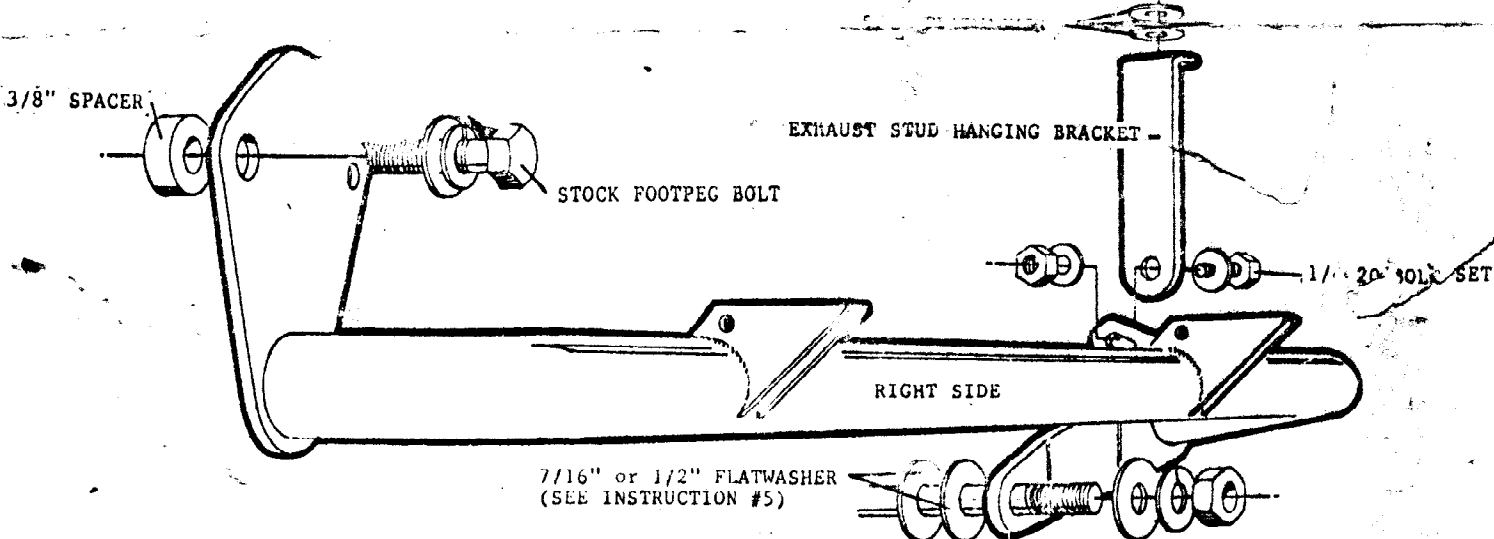

6. REMOVE THE STOCK SHIFTER RUBBER AND CUT OFF THE TWO INSIDE RINGS (THIS MAKES ROOM FOR THE HEEL-TOE SHIFTER FORK) AND THEN REINSTALL. MOUNT THE LEFTHAND FOOTBOARD TO THE STOCK SHIFTER FORK BY MOUNTING THE SHIFTER FORK ONTO THE CLEAR AREA ON THE STOCK SHIFT PEDAL. SECURE THE REAR MOUNT TO THE STOCK FOOTPEG BUSH USING THE 1/2" SPACER, ONE 7/16" FLAT WASHER, AND THE STOCK LOCK WASHER AND ACORN NUT. LEAVE LOOSE.

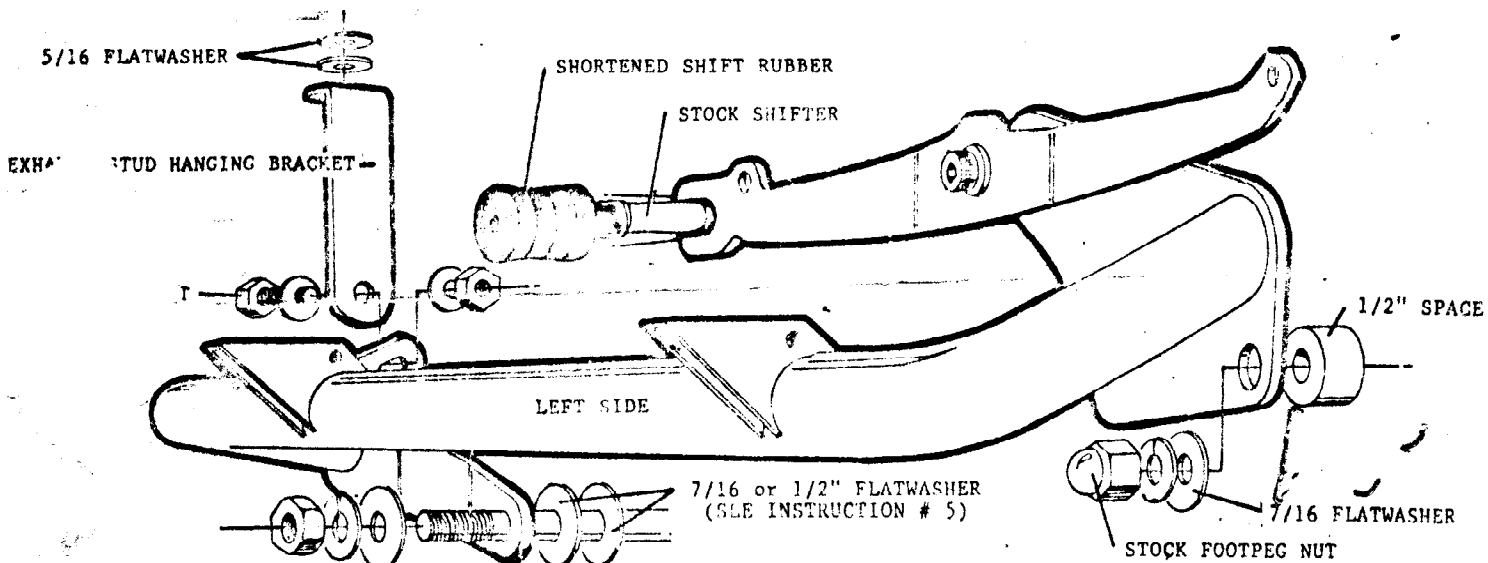

7. FINALLY, FASTEN THE EXHAUST STUD HANGING BRACKETS TO THE FRONT SIDE OF THE SLOTTED TABS ON THE FLOORBOARD SUPPORTS USING THE 1/4 20 X 3/4" BOLT SETS. (ON GLECCO ONLY THE HANGING BRACKET MAY REQUIRE MOUNTING TO THE BACK SIDE OF THE SLOTTED TABS) TIGHTEN ALL NUTS AND BOLTS SECURELY.

8. INSTALL THE FOOTBOARDS.