



MOUNTING INSTRUCTIONS FOR 45-1836 GL1800 LED LIGHTED FILLER ACCENT

Note: Read instructions thoroughly before installing.

1. Place bike on center stand.
2. Remove the rear fender per service manual instructions.
3. Remove license plate mount.
4. Clear rear fender with alcohol.
5. Align and install part 45-1836 with two-sided tape provided.
6. Install license plate mount with spacers, new bolts, washers and locknuts provided. See Steps.
7. Connect light to the applicable wiring on motorcycle.
8. Re-install rear fender per manual instructions.


Wiring: Black – Ground
Yellow – Running
Red - Brake



Not Lighted



Lighted

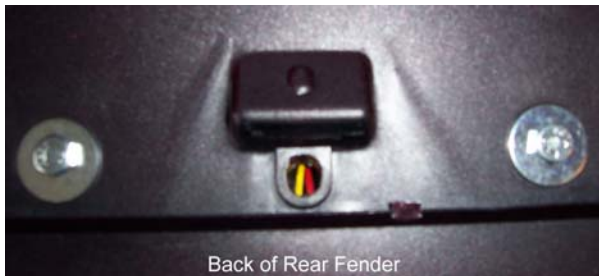


Back of Rear Fender
Hardware Step 1



Spacer location

Hardware Step 2

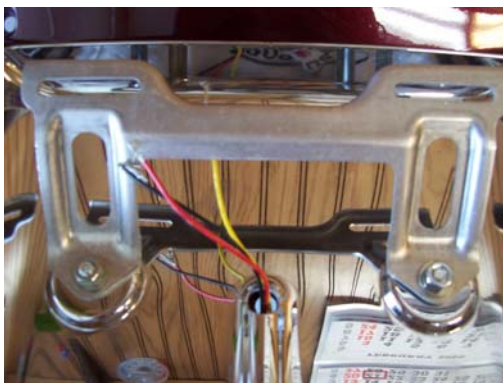

Hardware Step 3

